

Eyeball Network Camera

Quick Start Guide



ZHEJIANG DAHUA VISION TECHNOLOGY CO., LTD. V1.0.2



Foreword

General

This manual introduces the installation, functions and operations of network camera. Read carefully before using the device, and keep the manual safe for future reference.

Safety Instructions

The following categorized signal words with defined meaning might appear in the manual.

Signal Words	Meaning	
WARNING	Indicates a medium or low potential hazard which, if not avoided, could result in slight or moderate injury.	
	Indicates a potential risk which, if not avoided, could result in property damage, data loss, lower performance, or unpredictable result.	
NOTE NOTE	Provides additional information as a supplement to the text.	

Revision History

Version	Revision Content	Release Date
V1.0.2	Updated available appearance and dimensions.	June 2023
V1.0.1	Updated available appearance.	February 2023
V1.0.0	First release.	September 2022

Privacy Protection Notice


As the device user or data controller, you might collect the personal data of others such as their face, fingerprints, and license plate number. You need to be in compliance with your local privacy protection laws and regulations to protect the legitimate rights and interests of other people by implementing measures which include but are not limited: Providing clear and visible identification to inform people of the existence of the surveillance area and provide required contact information.

About the Manual

- The manual is for reference only. Slight differences might be found between the manual and the product.
- We are not liable for losses incurred due to operating of the product in ways that are not in compliance with the manual.

L

• The manual will be updated according to the latest laws and regulations of related jurisdictions. For detailed information, see the paper User Manual, use our CD-ROM, scan the QR code or visit our official website. The manual is for reference only. Slight differences might be found between the electronic version and the paper version.





- All the designs and software are subject to change without prior written notice. Product updates might result in some differences appearing between the actual product and the manual. Please contact customer service for the latest program and supplementary documentation.
- There might be deviations in the description of the technical data, functions and operations, or errors in the print. If there is any doubt or dispute, we reserve the right of final explanation.
- Upgrade the reader software or try other mainstream reader software if the manual (in PDF format) cannot be opened.
- All trademarks, registered trademarks and the company names in the manual are the properties of their respective owners.
- Please visit our website, contact the supplier or customer service if any problems occur while using the device.
- If there is any uncertainty or controversy, we reserve the right of final explanation.



Important Safeguards and Warnings

This section introduces content covering the proper handling of the device, hazard prevention, and prevention of property damage. Read carefully before using the device, comply with the guidelines when using it.

Transportation Requirements



- Transport the device under allowed humidity and temperature conditions.
- Pack the device with packaging provided by its manufacturer or packaging of the same quality before transporting it.
- Do not place heavy stress on the device, violently vibrate or immerse it in liquid during transportation.

Storage Requirements



- Store the device under allowed humidity and temperature conditions.
- Do not place the device in a humid, dusty, extremely hot or cold site that has strong electromagnetic radiation or unstable illumination.
- Do not place heavy stress on the device, violently vibrate or immerse it in liquid during storage.

Installation Requirements

- Strictly comply with the local electrical safety code and standards, and check whether the power supply is correct before operating the device.
- Please follow the electrical requirements to power the device.
 - When selecting the power adapter, the power supply must conform to the requirements of ES1 in IEC 62368-1 standard and be no higher than PS2. Please note that the power supply requirements are subject to the device label.
 - ◇ We recommend using the power adapter provided with the device.
- Do not connect the device to two or more kinds of power supplies, unless otherwise specified, to avoid damage to the device.
- The device must be installed in a location that only professionals can access, to avoid the risk of non-professionals becoming injured from accessing the area while the device is working. Professionals must have full knowledge of the safeguards and warnings of using the device.



- Do not place heavy stress on the device, violently vibrate or immerse it in liquid during installation.
- An emergency disconnect device must be installed during installation and wiring at a readily accessible location for emergency power cut-off.



- We recommend you use the device with a lightning protection device for stronger protection against lightning. For outdoor scenarios, strictly comply with the lightning protection regulations.
- Ground the function earthing portion 🗁 of the device to improve its reliability (certain models are not equipped with earthing holes). The device is a class I electrical appliance. Make sure that the power supply of the device is connected to a power socket with protective earthing.
- The dome cover is an optical component. Do not directly touch or wipe the surface of the cover during installation.

Operation Requirements



- The cover must not be opened while the device is powered on.
- Do not touch the heat dissipation component of the device to avoid the risk of getting burnt.



- Use the device under allowed humidity and temperature conditions.
- Do not aim the device at strong light sources (such as lamplight, and sunlight) when focusing it, to avoid reducing the lifespan of the CMOS sensor, and causing overbrightness and flickering.
- When using a laser beam device, avoid exposing the device surface to laser beam radiation.
- Prevent liquid from flowing into the device to avoid damage to its internal components.
- Protect indoor devices from rain and dampness to avoid electric shocks and fires breaking out.
- Do not block the ventilation opening near the device to avoid heat accumulation.
- Protect the line cord and wires from being walked on or squeezed particularly at plugs, power sockets, and the point where they exit from the device.
- Do not directly touch the photosensitive CMOS. Use an air blower to clean the dust or dirt on the lens.
- The dome cover is an optical component. Do not directly touch or wipe the surface of the cover when using it.
- There might be a risk of electrostatic discharge on the dome cover. Power off the device when installing the cover after the camera finishes adjustment. Do not directly touch the cover and make sure the cover is not exposed to other equipment or human bodies
- Strengthen the protection of the network, device data and personal information. All necessary
 safety measures to ensure the network security of the device must be taken, such as using
 strong passwords, regularly changing your password, updating firmware to the latest version,
 and isolating computer networks. For the IPC firmware of some previous versions, the ONVIF
 password will not be automatically synchronized after the main password of the system has
 been changed. You need to update the firmware or change the password manually.

Maintenance Requirements



• Strictly follow the instructions to disassemble the device. Non-professionals dismantling the device can result in it leaking water or producing poor quality images. For a device that is required to be disassembled before use, make sure the seal ring is flat and in the seal groove when putting the cover back on. When you find condensed water forming on the lens or the desiccant becomes green after you disassembled the device, contact after-sales service to replace the desiccant. Desiccants might not be provided depending on the actual model.



- Use the accessories suggested by the manufacturer. Installation and maintenance must be performed by qualified professionals.
- Do not directly touch the photosensitive CMOS. Use an air blower to clean the dust or dirt on the lens. When it is necessary to clean the device, slightly wet a soft cloth with alcohol, and gently wipe away the dirt.
- Clean the device body with a soft dry cloth. If there are any stubborn stains, clean them away with a soft cloth dipped in a neutral detergent, and then wipe the surface dry. Do not use volatile solvents such as ethyl alcohol, benzene, diluent, or abrasive detergents on the device to avoid damaging the coating and degrading the performance of the device.
- The dome cover is an optical component. When it is contaminated with dust, grease, or fingerprints, use degreasing cotton moistened with a little ether or a clean soft cloth dipped in water to gently wipe it clean. An air gun is useful for blowing dust away.
- It is normal for a camera made of stainless steel to develop rust on its surface after being used in a strong corrosive environment (such as the seaside, and chemical plants). Use an abrasive soft cloth moistened with a little acid solution (vinegar is recommended) to gently wipe it away. Afterwards, wipe it dry.



Table of Contents

Forewo	ordI
Import	ant Safeguards and WarningsIII
1 Intro	duction1
1.1	duction1 Appearance1
1.2	Cable1
1.3	Connecting Alarm Input/Output
2 Netw	ork Configuration4
2.1	Initializing the Camera4
2.2	Changing the Device IP Address
2.3	Logging in to the Webpage5
3 Insta	lation6
3.1	Packing List
	Dimensions
3.3	Installing the Camera
	3.3.1 Installation Methods
	3.3.2 (Optional) Installing the SD Card8
	3.3.3 Attaching the Camera
	3.3.4 (Optional) Installing Waterproof Connector10
	3.3.5 Adjusting Lens Angle






1 Introduction

1.1 Appearance

This manual is available for the following appearances.

Figure 1-1 Available appearances

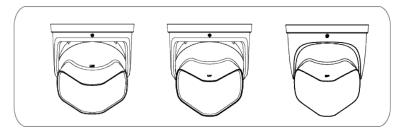

1.2 Cable

Waterproof all the cable joints with insulating tape and waterproof tape to avoid short circuit and water damage. For the detailed operation, see FAQ manual.

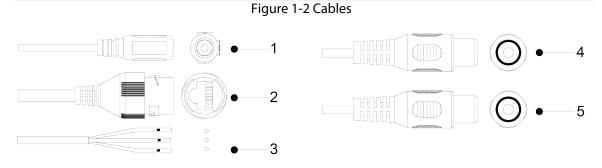


Table 1-1 Cable information

No.	Port name	Description	
1	Power input	Inputs 12 VDC power. Be sure to supply power as instructed in the manual. Device abnormity or damage might occur if power is not supplied correctly.	
2	Ethernet port	 Connects to network with network cable. Provides power to the device with PoE. PoE is available on select models. 	
3	Alarm I/O	Includes alarm signal input and output ports. The number of I/O ports might vary on different devices. For detailed information, see Table 1-2 .	

1



No.	Port name	Description	
4 Audio input		Connects to sound pickups to receive audio signals.	
5	Audio output	Connects to speaker to output audio signals.	

Table 1-2 Description of Alarm I/O port

Port Name	Description	
ALARM_IN	Receives the switch signals of external alarm source.	
ALARM_OUT	Outputs alarm signals to alarm devices.	
ALARM_GND	Ground connection.	

1.3 Connecting Alarm Input/Output

The camera can connect to external alarm input/output devices through the digital input/output port.

 \square

Alarm input/output is available on select models.


Procedure

<u>Step 1</u> Connect the alarm input device to the alarm input end of the I/O port. See Figure 1-3.

The device collects different statuses of the alarm input port while the input signal is idling and being grounded.

- Device collects logic "1" when the input signal is connected to +3 V to +5 V or idling.
- Device collects logic "0" when the input signal is grounded.

Figure 1-3 Alarm input

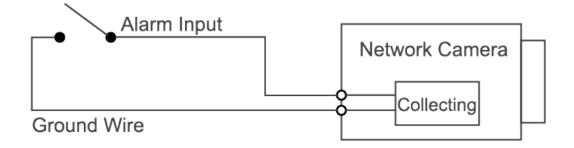

- <u>Step 2</u> Connect the alarm output device to the alarm output end of the I/O port. The alarm output is an open-drain output, which works in the following modes.
 - Mode A: Level application. The alarm outputs high and low level signals, and the alarm outlet is OD, which requires external pull-up resistance (10 K Ohm typical) to work. The maximum external pull-up level is 12 V, maximum port current is 300 mA, and the



default output signal is high-level (external pull-up voltage). The default output signal switches to low- level when an alarm is triggered (As long as the operating current is below 300 mA, the output low-level voltage is lower than 0.8 V).

• Mode B: Switch application. Alarm output is used to drive the external circuit. The maximum voltage is 12 V and the maximum current is 300 mA. If the voltage is higher than 12 V, please use an additional electric relay.

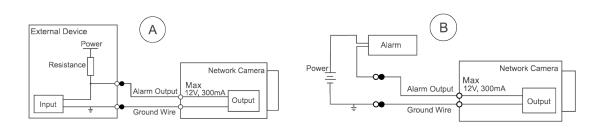


Figure 1-4 Alarm output

- <u>Step 3</u> Log in to the webpage, and then configure the alarm input and alarm output in alarm settings.
 - The alarm input on the webpage corresponds to the alarm input end of the I/O port. There will be high level and low level alarm signals generated by the alarm input device when an alarm occurs. Set the input mode to "NO" (default) if the alarm input signal is logic "0", and set to "NC" if the alarm input signal is logic "1".
 - The alarm output on the webpage corresponds to the alarm output end of the device, which is also the alarm output end of the I/O port.



2 Network Configuration

Device initialization and IP setting can be finished with the ConfigTool or on webpage. For more information, see web operation manual.

 \square

- Device initialization is available on select models, and it is required at first-time use and after device is reset.
- Device initialization is available only when the IP addresses of the device (192.168.1.108 by default) and the computer stays on the same network segment.
- Plan usable network segment properly to connect the device to the network.
- The following figures and pages are for reference only.

2.1 Initializing the Camera

Procedure

- <u>Step 1</u> Search for the device that needs to be initialized through ConfigTool.
 - a. Double-click ConfigTool.exe to open the tool.
 - b. Click Modify IP.
 - c. Select the searching way, and then click **OK**.
 - d. Select one or several cameras in uninitialized status, and then click Initialize.
- <u>Step 2</u> Select the devices to be initialized, and then click **Initialize**.

If you do not provide the email address for password reset, you can reset the password only through XML file.

Usemame	device(s) have not been initialized
New Password	
Confirm Password	Weak Medium Strong
	Use a password that has 8 to 32 characters, it can be a combination of letter(s), number(s) and symbol(s) with at least two kinds of them. (excluding ",",,%)
Email Address	(for password reset)
	password, please set password again in Search Setup.

Figure 2-1 Password setting

Step 3 Select Auto-check for updates as needed, and then click OK to initialize the device.



If initialization failed, click ^A to see more information.

Step 4 Click Finish.

2.2 Changing the Device IP Address

\square

- You can change the IP address of one or more devices at a time. This section is based on changing IP addresses in batches.
- Changing IP addresses in batches is available only when the corresponding devices have the same login password.

Procedure

- <u>Step 1</u> Search for the device whose IP address needs to be changed through ConfigTool.
 - a. Double-click ConfigTool.exe to open the tool.
 - b. Click Modify IP.
 - c. Select the searching way, enter the username and password, and then click **OK**.

The username is **admin**, and the password must be the one you set while initializing the device.

- <u>Step 2</u> Select the devices whose IP addresses need to be changed, and then click **Modify IP**.
- <u>Step 3</u> Configure IP address.
 - Static mode: When you select Static, you need to enter Start IP, Subnet Mask, and Gateway. The IP addresses of the devices will be modified successively starting from the first IP entered.
 - **DHCP** mode: If the DHCP server is available on the network, when you select **DHCP**, the IP address of devices will be automatically obtained through the DHCP server.

\square

The same IP address will be set for multiple devices if you select the **Same IP** checkbox. Click **OK**.

2.3 Logging in to the Webpage

Procedure

Step 4

<u>Step 1</u> Open the IE browser, enter the IP address of the device in the address bar, and then press the Enter key.

If the setup wizard opens, follow the on-screen instructions to complete it.

- <u>Step 2</u> Enter the username and password in the login box, and then click **Login**.
- <u>Step 3</u> (Optional) For first-time login, click **Click Here to Download Plugin**, and then install the plugin as instructed.

The home page opens when installation is complete.



3 Installation


3.1 Packing List

\square

- The tool required for the installation such as electric drill is not provided in the package.
- The operation manual and related tool information are contained in the disk or the QR code.

Figure 3-1 Packing list			
Network Camera ×	1 Manual × 2	CD-ROM/QR Code × 1	Waterproof Connector × 1
Wrench × 1	Screw Package× 1	Position Map × 1	

3.2 Dimensions




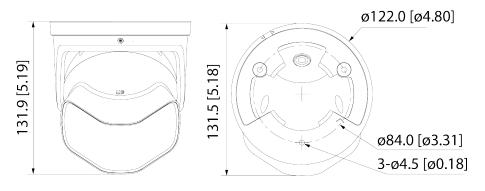






Figure 3-3 Dimensions: Model B (mm [inch])



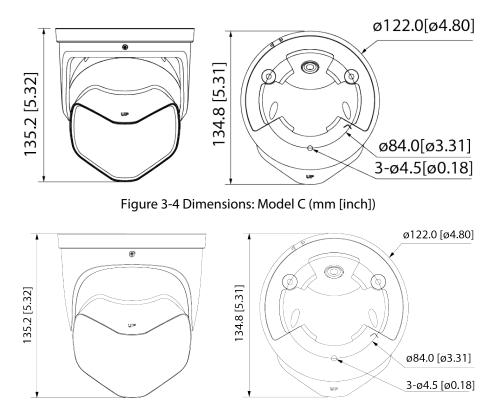

3.3 Installing the Camera

3.3.1 Installation Methods

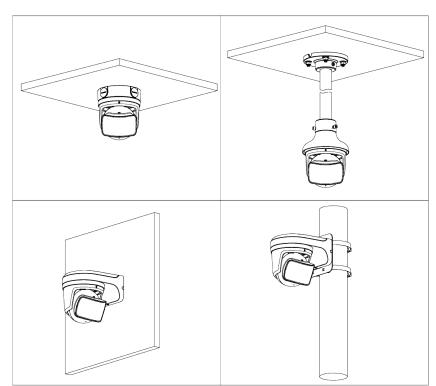


Figure 3-5 Installation methods


3.3.2 (Optional) Installing the SD Card

- SD card slot is available on select models.
- Disconnect the power before installing or removing the SD card.

\square

Press and hold the reset button for 10 seconds to reset the device.

Figure 3-6 Install the SD card

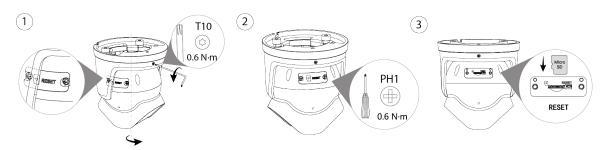



3.3.3 Attaching the Camera

\wedge

Make sure that the mounting surface is strong enough to hold at least three times the weight of the device and bracket.

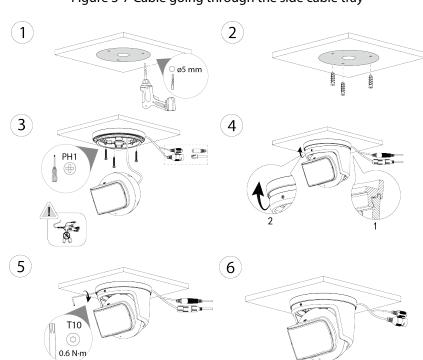


Figure 3-7 Cable going through the side cable tray



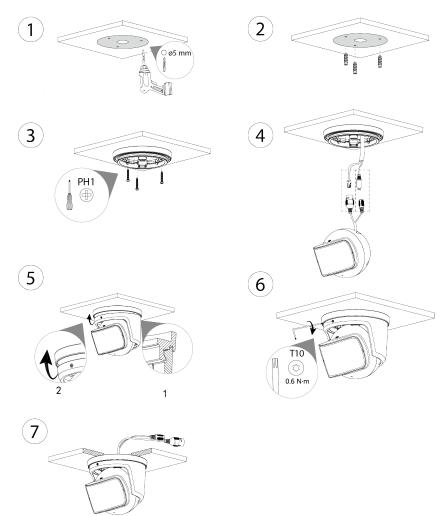



Figure 3-8 Cable going through the mounting surface

3.3.4 (Optional) Installing Waterproof Connector

This part is needed only when there is waterproof connector in the package and the device is used outdoors.




Figure 3-9 Install waterproof connector

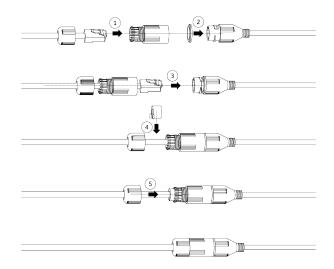

3.3.5 Adjusting Lens Angle

Figure 3-10 Adjust lens angle

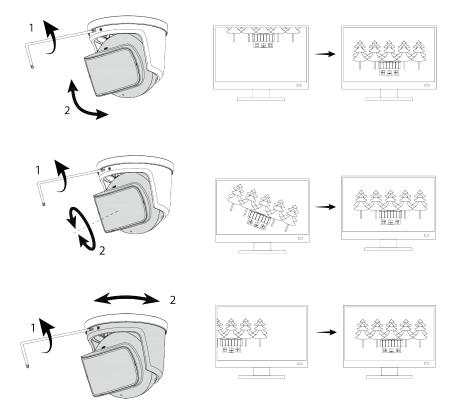

ENABLING A SAFER SOCIETY AND SMARTER LIVING

.